

MED-6215

Optically clear low consistency silicone elastomer

DESCRIPTION

- Two-part, optically clear, solvent free, low viscosity silicone elastomer
- Cures with heat via addition-cure chemistry
- 10:1 Mix Ratio (Part A: Part B)

APPLICATION

- For use in potting, encapsulating, coating, and injection or transfer molding applications
- Use in the casting of clear silicone parts
- Use as a coating, by means of dipping or painting.

NuSil™ MED-6215 may be considered for use in human implantation for a period of greater than 29 days.

PROPERTIES

| Typical Properties | Average Result | Standard | NT-TM |
|---------------------------------------|-----------------------|-------------------------|-------|
| Uncured: | | | |
| Appearance | Translucent | ASTM D2090 | 002 |
| Viscosity, Part A | 5,500 cP (5,500 mPas) | ASTM D1084, D2196 | 001 |
| Viscosity, Part B | 95 cP (95 mPas) | ASTM D1084, D2196 | 001 |
| Work Time | 5 hours | - | 008 |
| Cured: 15 minutes at 150°C (302°F) | | | |
| Specific Gravity | 1.03 | ASTM D792 | 003 |
| Durometer, Type A | 50 | ASTM D2240 | 006 |
| Tensile Strength | 1,250 psi (8.6 MPa) | ASTM D412 | 007 |
| Elongation | 100% | ASTM D412 | 007 |
| Tissue Culture (Cytotoxicity Testing) | Pass | USP <87> ISO 10993-5 | 061 |
| Elemental Analysis of Trace Metals | Pass | ASTM E305 | 131 |

The above properties are tested on a lot-to-lot basis. Do not use as a basis for preparing specifications. . Please [contact](#) us for assistance and recommendations in establishing particular specifications.

BIOMATERIALS
IMPLANT LINE

INSTRUCTIONS FOR USE

Mixing

Combine Part A and Part B in a 10:1 mix ratio prior to use. Airless mixing, metering or dispensing equipment is recommended for production operations.

Recommended mixing equipment: <https://synergymixers.com/>

If mixing by hand, take care to minimize air entrapment.

Vacuum Deaeration

Remove air entrapped during mixing by common vacuum deaeration procedure, observing all applicable safety precautions. Slowly apply full vacuum to a suitable container of at least four times the volume of material being de-aired. Hold vacuum until bulk deaeration is complete.

Cure Inhibition

Curing may be inhibited by traces of amines, sulfur, nitrogen oxide, organotin compounds, and carbon monoxide. Because organic rubbers often contain these substances, they should not come in contact with the uncured elastomer. Catalyst residues from silicone RTV elastomers and peroxide-cured silicone elastomers may also inhibit the cure.

Note: Some bonding applications may require the use of a primer.

Recommended Primer: [MED1-161](#)

For more information on primer application, review: [Application & Storage Recommendations](#)

FDA MASTER FILE

A Master File for MED-6215 has been filed with the U.S. Food and Drug Administration. Customers interested in authorization to reference the Master File must please [contact us](#).

REACH COMPLIANCE

Please [contact](#) our Regulatory Compliance department with any questions or for further assistance.

SPECIFICATIONS

Do not use the properties shown in this technical profile as a basis for preparing specifications. Please [contact us](#) for assistance and recommendations in establishing particular specifications.

Packaging

1 Pint Kit (505 g)
1 Gallon Kit (4.04 kg)
5 Gallon Kit (20.2 kg)
1 Drum Kit

Warranty

12 Months

WARRANTY INFORMATION

The warranty period provided by NuSil Technology LLC (hereinafter "NuSil Technology") is 12 months from the date of shipment when stored below 40°C in original unopened containers. Unless NuSil Technology provides a specific written warranty of fitness for a particular use, NuSil Technology's sole warranty is that the product will meet NuSil Technology's then current specification. NuSil Technology specifically disclaims all other expressed or implied warranties, including, but not limited to, warranties of merchantability and fitness for use. The exclusive remedy and NuSil Technology's sole liability for breach of warranty is limited to refund of purchase price or replacement of any product shown to be other than as warranted. NuSil Technology expressly disclaims any liability for incidental or consequential damages.

WARNINGS ABOUT PRODUCT SAFETY

NuSil Technology believes, to the best of its knowledge, that the information and data contained herein are accurate and reliable. The user is responsible to determine the material's suitability and safety of use. NuSil Technology cannot know each application's specific requirements and hereby notifies the user that it has not tested or determined this material's suitability or safety for use in any application. The user is responsible to adequately test and determine the safety and suitability for their application and NuSil Technology makes no warranty concerning fitness for any use or purpose. NuSil Technology has completed no testing to establish safety of use in any medical application.


NuSil Technology has tested this material only to determine if the product meets the applicable specifications. Please [contact us](#) for assistance and recommendations when establishing specifications.) When considering the use of NuSil Technology products in a particular application, review the latest Material Safety Data Sheet and [contact](#) NuSil Technology with any questions about product safety information.

BIOMATERIALS
IMPLANT LINE

Do not use any chemical in a food, drug, cosmetic, or medical application or process until having determined the safety and legality of the use. The user is responsible to meet the requirements of the U.S. Food and Drug Administration (FDA) and any other regulatory agencies. Before handling any other materials mentioned in the text, the user is advised to obtain available product safety information and take the necessary steps to ensure safety of use.

PATENT / INTELLECTUAL PROPERTY WARNING

NuSil Technology disclaims any expressed or implied warranty against the infringement of any domestic or international patent/intellectual property right. NuSil Technology does not warrant the use or sale of the products described herein will not infringe the claims of any domestic or international patent/intellectual property right covering the product itself, its use in combination with other products, or its use in the operation of any process.

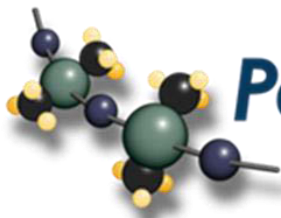

Sales and technical problem-solving house

NuSil® approved channel partner

UK – Ireland - Benelux

Mixing Technology

The **DASD™ DualServo Drive Mixers** is the most advanced mixing technology available today, fully capable of mixing a variety of materials from thick to thin in any combination quickly and repeatably.

Contact our mixing gurus today:

www.synergymixers.com



NO
Bubbles



NO
Blades



NO
Cleanup



Dispensing Solutions

With over 25 years of knowledge in dispensing solutions, we are available to assist you with your dispensing and fine-tune your processes. Our catalogue features precision systems that provide consistent fluid applications, leading to enhanced accuracy, increased yields, decreased material expenses, improved process control, and a safer work environment.

Contact us today to discuss your options:

sales@silicone-polymers.co.uk



Silicone Cleaning & Removal

To ensure a safe and clean environment and to prevent contamination that could impact your silicone in the future, we recommend using the following products on the link below:

[PST- Silicone Cleaning and Removal](#)



Polymer Systems Technology Limited

Unit 2, Network 4, Lincoln Road, Cressex Business Park, High Wycombe, Buckinghamshire, HP12 3RF

www.silicone-polymers.com

Tel: +44 (0) 1494 446610

Email: sales@silicone-polymers.co.uk